


ASSEMBLY INSTRUCTIONS

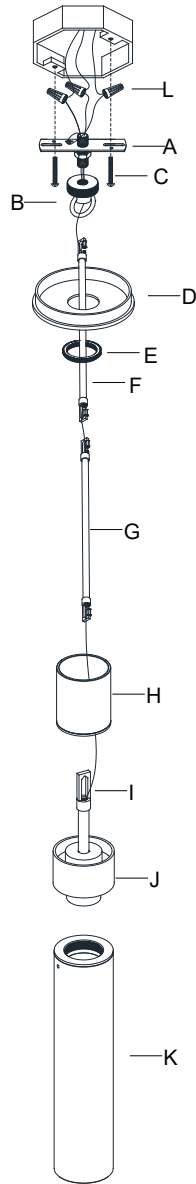

Presidio Petite Tall Pendant

Item # S 5675

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

WARNING*SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT. DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

NOTE: CAREFULLY UNPACK EACH PIECE IN TOP LAYER OF PACKING PRIOR TO REMOVING. RETAIN ALL PACKING MATERIAL UNTIL INSPECTION AND INSTALLATION ARE FINAL.

1. Carefully remove all parts from the box.
2. Install the collar loop (B) to the mounting strap (A), then install the mounting strap (A) to the junction box and secure with the mounting screws (C).
3. Install the canopy (D) to the mounting strap (A) and secure with the collar ring (E). If needed, adjust canopy height by loosening hex nuts and screwing collar loop (C) up or down then re-secure.
4. Place the up glass shade (H) into shade holder (J).
5. Feed the fixture wires through the rod (G) & (F).
6. Hook the rod (G) to the fixture hanging loop (I), then hook rod (F) to rod (G).
7. Hang the rod (F) to the collar loop (B).
8. Measure the wires then cut, be certain to leave enough to connect the wires in the junction box.
9. Loosen the collar ring (E) and let the canopy (D) slip down the rod (F) carefully.
10. Strip the insulation on the fixture wires about 5/8".
11. Twist the fixture wires together and push through the center hole of the collar loop (B).
12. Wrap the fixture ground wire to the green ground screw on the mounting strap (A) and secure, then connect to the ground wire in the junction box using the wire nut (L).
IT IS IMPERATIVE THAT THIS FIXTURE BE GROUNDED.
13. Connect the fixture ribbed wire (no marking) to the neutral wire in the junction box using the wire nut (L).
14. Connect the fixture smooth wire (with marking) to the hot wire in the junction box using the wire nut (L).
DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OTHERWISE SAFETY WILL BE COMPROMISED.
15. Carefully tuck the wire connections into the junction box.
16. Install the canopy (D) to the junction box and secure with the collar ring (E).
17. Insert light bulb (not included) into the socket.
18. Screw glass shade (K) to shade holder (J).
19. Installation is complete, turn on power at fuse or circuit breaker.

***Clean with a dry, soft cloth only. Use no harsh abrasives or chemical agents.